



## A clear chromatogram can be depicted even for a high UV absorbance sample. – Scroll function –

■ A high UV absorbance sample requires a less sensitive scale to monitor.

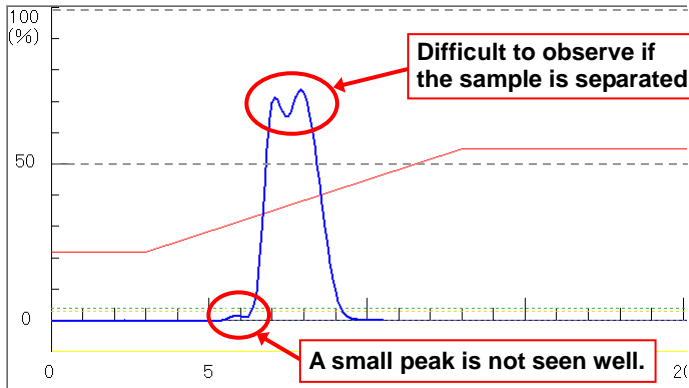

Observe by detector scale 5.12 AUFS.

■ A high UV absorbance sample can be analyzed well with a finer scale of Yamazen UV detector.

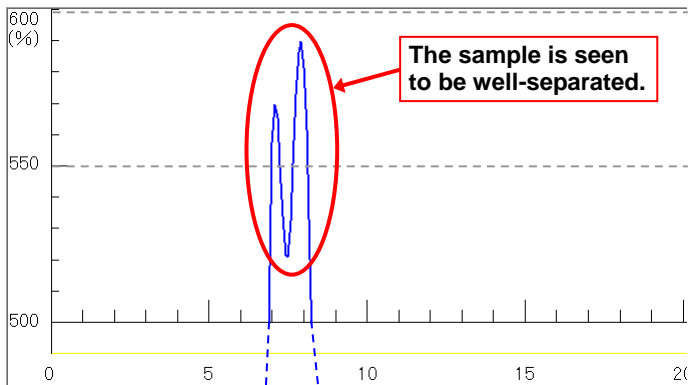

Observe by detector scale 0.64 AUFS.

■ With the optional 2-wavelength detector, a high and low absorbance chromatograms are observed at the same time.

